


INSTALLATION INSTRUCTIONS

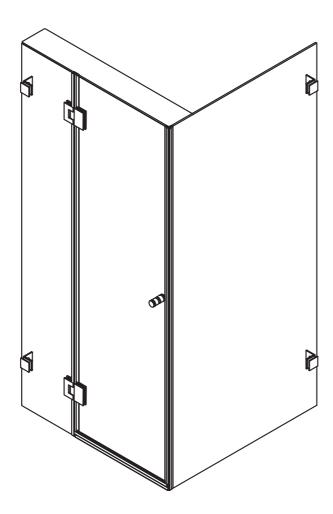

Oxley Frameless Shower Screen

BEFORE YOU START



Please keep this manual and a copy of your invoice for further reference, such as for ordering replacement parts if necessary. Our contact details are on the back page.

GENERAL INFORMATION

Read this manual carefully and completely before proceeding with installation.

This installation requires 2 people to safely handle and install the shower screen.

It is recommended that you wear safety glasses at all times during the installation.

Take care with the transportation and handling of toughened safety glass as it is designed to shatter into small pieces on impact in order to avoid injury.

INSTALLATION

. We recommend installation is undertaken by glazier or a trade professional as the installation is technical. For Certificate of Occupancy, it must be installed by a licenced glazier.

. Ensure your room is fully completed (all finishes and fittings including tiles etc) and that the location of the screen is straight and plumb.

. Silicone sealant should be used to seal the gap where the ceramic tiles meet the fixed panel. NOTE: (Caulking) No sealant is required inside the shower, unless otherwise stated.

. Shower screen installation should comply with AS 1288 and AS 3740.

. To ensure stability and safe performance of frameless shower screens, glass gussets, braces and supports at the head of the frameless glass may be necessary.

. Unframed doors should be installed in such a manner as to avoid the edge of the glass, which is the part of glass most vulnerable to breakage, from coming into contact with the tile or floor.

. Ensure a minimum of 3mm clearance is maintained between all edges of a frameless glass door and the fixed panel and or wall and the floor.

. Ensure that, when making alterations to a shower area, frameless shower screen glass door/s do not make contact with objects that may cause the frameless glass door to fracture.

MAINTENANCE & CARE

To clean the glass, apply ammonia-free glass cleaner or methylated spirits. Wipe in a circular motion with a clean non-abrasive lint-free cloth. Clean frame and brackets with mild soap diluted in water. Do not use solvents or harsh detergents, bleaches, scourers or any other abrasive cleaner on frame or glass. To reduce cleaning time, we recommend wiping the glass panels with a squeegee after each use. Inspect installation at six-monthly intervals to ensure gap clearances are maintained, particularly around the door. Tighten screws on hinges if required. Moving hinges may require mineral oil such as sewing machine oil to lubricate their movement.



All of our products containing glass are manufactured to the Australian standards code AS 2208:1996 Safety glazing materials in buildings. In order to meet the standard that refers to its installation, and be able to receive your Certificate of Occupancy, and to maintain your product warranty; this product must be installed by a licensed glazier.

TOOLS REQUIRED




Required drill bits are 6mm & 3mm (1/4" & 1/8")Use a 6mm (1/4") drill bit for ceramic when drilling into ceramic tiles.



SAFETY GLASSES

IMPORTANT: We recommend the use of safety glasses when installing and handling glass shower panels and screens.


DIAGRAM OF COMPONENTS

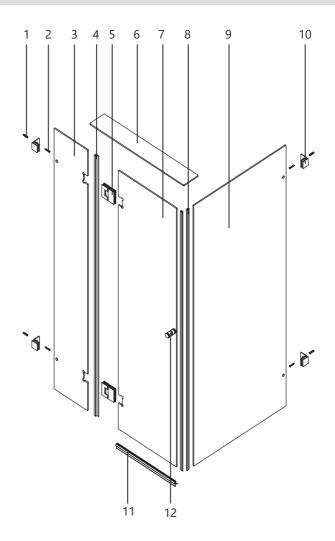


REF	DETAIL	QTY
1	Wall Plug 8mm	4
2	Screw ST5 x40	4
3	Fixed Panel (Door hinge)	1
4	Door Sweep (Side)	1
5	Hinges	2
6	Top Glass	1


REF	DETAIL	QTY
7	Door	1
8	Magnetic Strip	2
9	Return Panel	1
10	Angle Code	4
11	Door Sweep (Bottom)	1
12	Handle	1

```
4
```

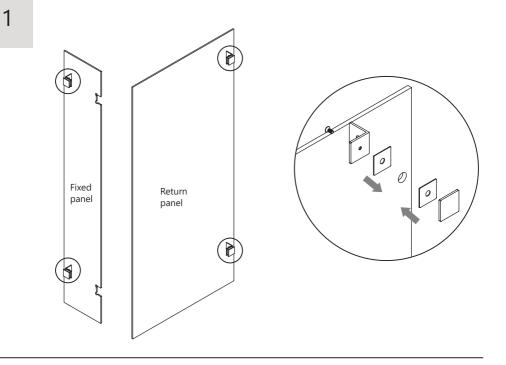



2

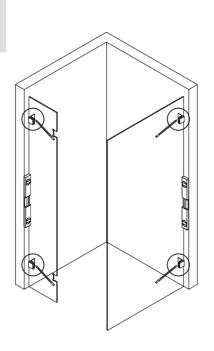

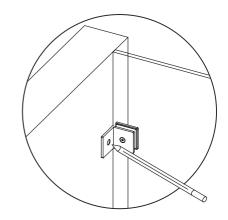



- 5 —

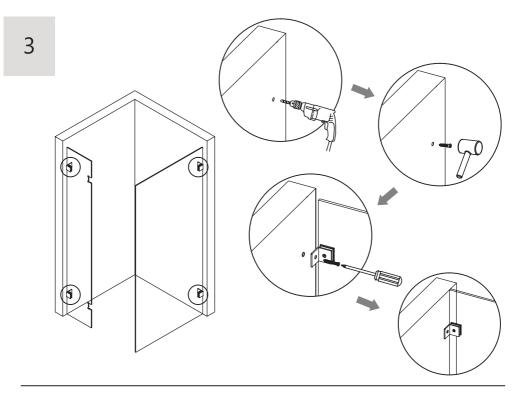


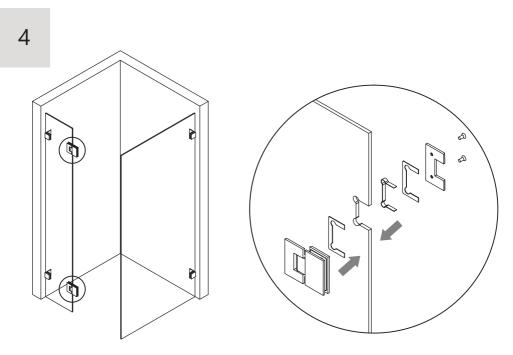



— 6 —

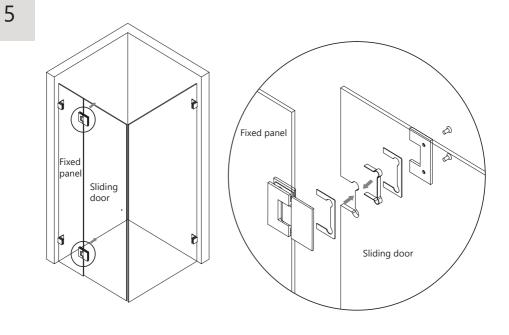


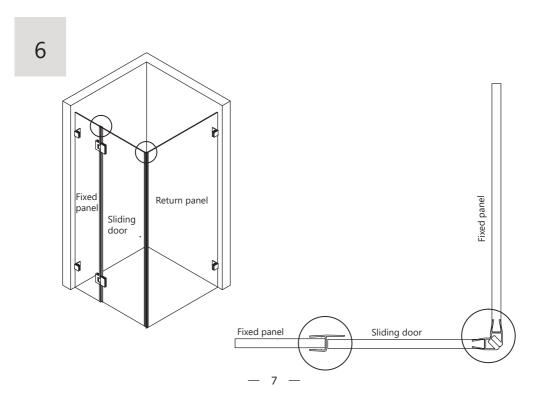

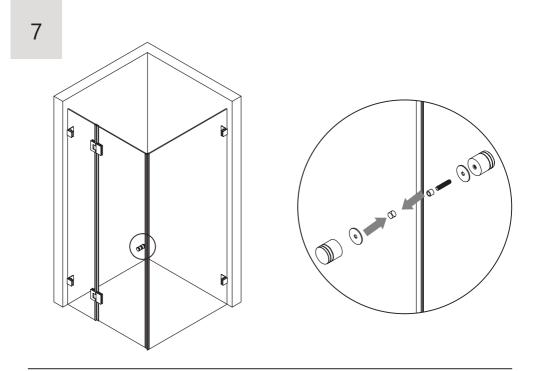

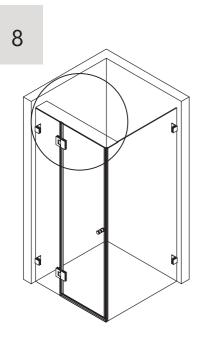

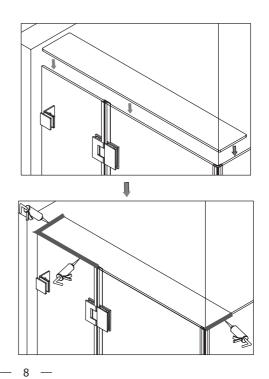

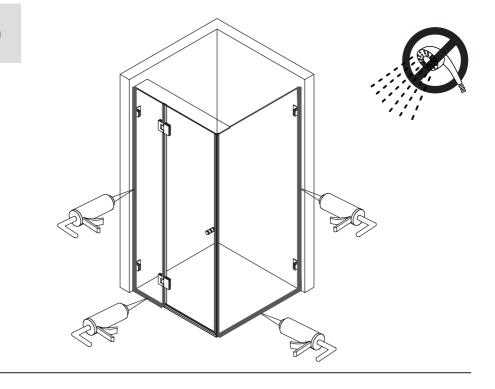



CONTACT US

Feel free to contact us for more information or if you have any questions with installing this product, please contact us via:

Call us: 1300 884 081 Email: support@fontaineind.com.au

fontaineind.com.au